



 
SKU # 741 085

YOW SKU # 576 787

Model # TY457-1211-3

USE AND CARE GUIDE

4 ft Lighted Grapevine Doe

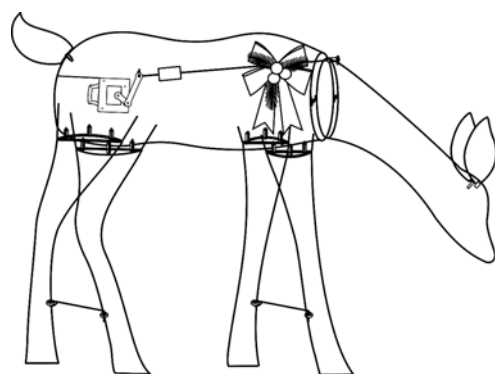

THANK YOU

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 4 ft Lighted Grapevine Doe. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!

Guarantee

What is Covered

The product is intended for residential seasonal use for approximately 90 days per year. This product is covered by a 90 day limited guarantee due to defects in material and workmanship. Return the product with purchase receipt to the location of purchase for refund within 90 days of purchase.

What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday

1-877-527-0313

 
HOMEACCENTSHOLIDAY.COM

Pre-Assembly

PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on a flat surface. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. If any parts are missing or damaged do not attempt assembly. Contact our customer service center or return to store. Assembly of this product may require more than one person.

PACKAGE CONTENTS

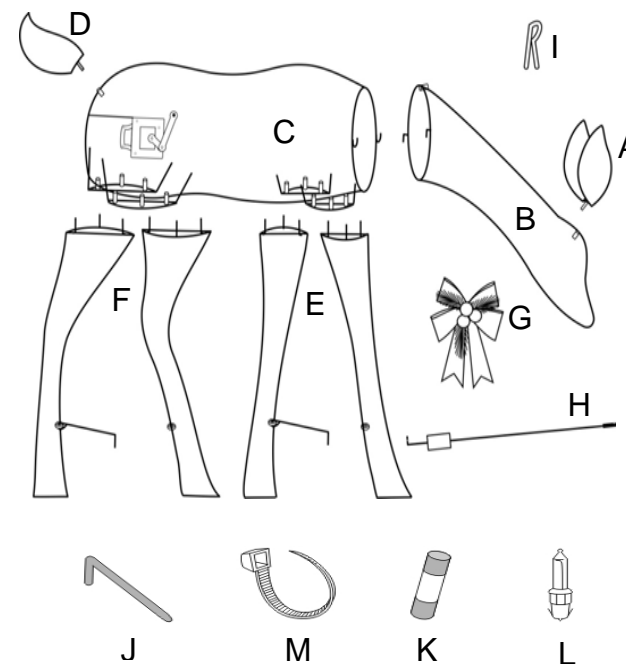

Package Contents/Parts List			Package Contents/Parts List		
Part	Description	Quantity	Part	Description	Quantity
A	Pair of Ear	1	H	Balanced Weight	1
B	Head	1	I	Cotter Pin	2
C	Body	1	J	Ground Stakes	4
D	Tail	1	K	Spare Fuse	2
E	Front Legs	2	L	Spare Bulb	6
F	Hind Legs	2	M	Plastic Ties	10
G	Accessory Bow	1			

Assembly

Assembling the Doe

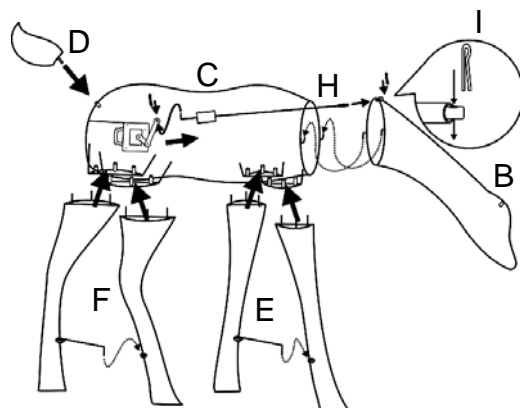 


Fig. 1

Step 1. Insert metal rods attached to the top of Front and Hind Legs (E&F) into the matching holes on the underside of Body (C). (Fig.1)

Step 2. The Legs come with support bars attached to stabilize the Doe. Attach the Support Bar to opposite leg.(Fig.1)

Step 3. Fasten each Leg and the Body together with Plastic Ties (M) and stand the Doe in an upright position.(Fig.1)

Step 4. Insert unhooked end of Balanced Weight into the matching hole in the top end of Neck then fasten with the Cotter Pin; There is a pair of hooks on the rear Head(A) and another pair of hooks on the forefront of the body. Hang the Head(B) hooks onto the hooks on the front of the body. (Fig.1)

Step 5. IMPORTANT: To avoid unsteady motor running, keep the balanced weight (H) higher than motor and insert the hooked end into the hole of plastic crank inside the body, secure them with the Cotter Pin (I).(Fig.1)

Step 6. Insert the wires of the Accessory Bow(G) through the holes of the Body(C) then twist the wires together to secure to the Doe.Insert the rod of the Tail (D) into the matching hole on the rear of the Body. (Fig.1)

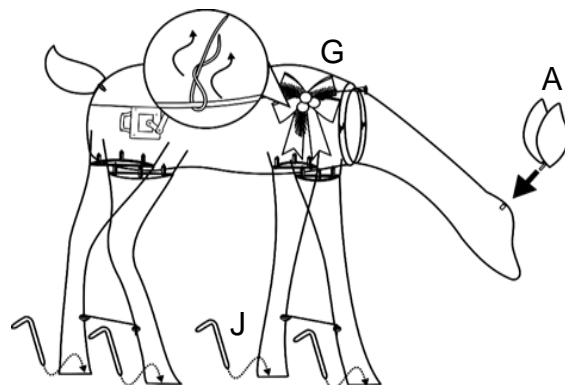 


Fig. 2

Step 7. Insert the two metal rods at the bottom of the Ears (A) into the holes on the top of the Head.(Fig.2)

Step 8. Secure the figure into ground by using the Stakes (J) provided.(Fig.2)

Pre-Operation

CAUTION: Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

CAUTION: The lighting string on this product is rated at 81.6 Watts (0.68 Amps). Do not overload. Do not connect to other lighting strings, decorative outfit or other electrical products. Before you use or re-use this product inspect it carefully. Return to Store or discard if the product has cuts, damage or frayed wire insulation on cords, cracks in the socket enclosures, loose connections or exposed copper wire.

Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product, wire and lighting connections. If the product is placed somewhere other than the ground it should be well secured and stable.
- Wipe the unit with a damp cloth and allow the unit to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

FOR INDOOR AND OUTDOOR USE